

vtech[®]

User's Manual

 **Kidizoom**[®]
SELFIECAM



© 2016 VTech
All rights reserved
Printed in China
91-003260-000 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind


...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

3-6 years

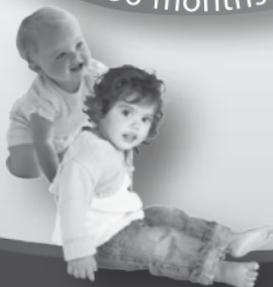

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Kidizoom® Selfie Cam** by **VTech®**!

This compact and lightweight camera, with a built-in rechargeable Li-ion polymer battery, is designed to take great photos, selfies, videos, play games and more!

With the rotatable camera lens and the included Selfie Stick, your child can take great selfies anytime! **Kidizoom® Selfie Cam** even includes fun Fantasy photo and video effects! That's not all; your child can even use the built-in Make Up Studio to beautify their shots! With the included Micro-USB cable, your child can upload their creations to a computer and share them with friends and family! Snap it! Beautify it! Share it! Enjoy using **Kidizoom® Selfie Cam**!

INCLUDED IN THIS PACKAGE

- 1 **Kidizoom® Selfie Cam** (with built-in rechargeable Li-ion polymer battery*)
- 1 Micro-USB cable
- 1 Selfie Stick
- 1 Neck strap
- 1 User's Manual



WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.




NOTE:

- Please keep this manual as it contains important information.
- The battery in this product must not be disposed of with household waste.
- The battery is recyclable; please follow your local recycling regulations.

This product is only to be connected to Class II equipment bearing the following symbol: 

* Battery is non-replaceable.

PRODUCT LAYOUT AND BUTTONS

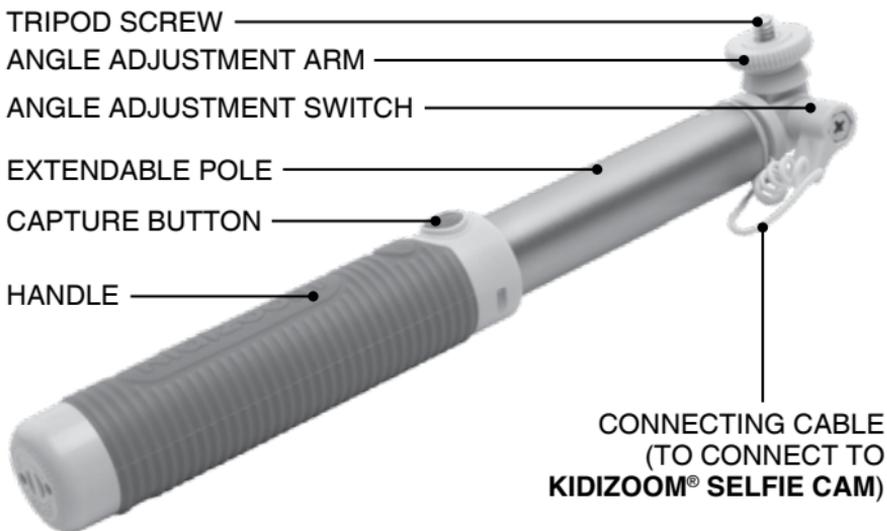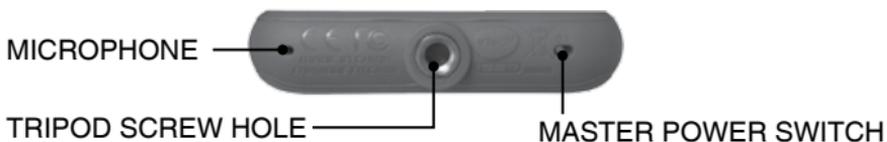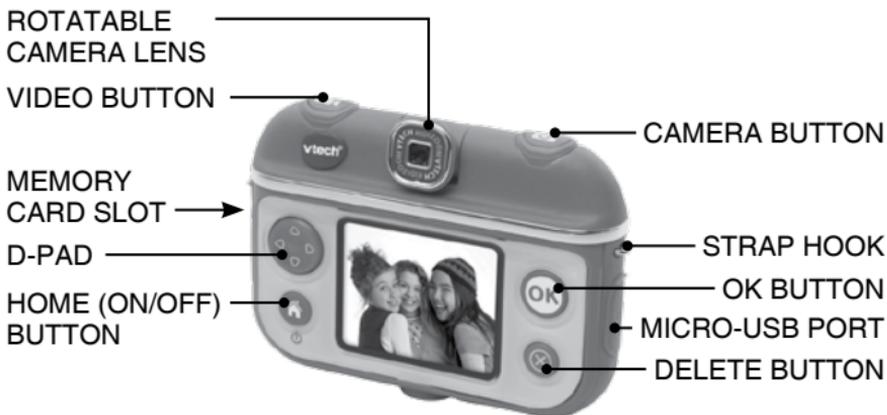

NOTE: SPEAKER is located on the back of the Selfie Cam

Master Power Switch

When the switch is set to the OFF position , the battery will be disconnected, the Selfie Cam will not function and the battery will not charge. When the switch is set to the ON position , the battery will be reconnected, the Selfie Cam will function and the battery can be charged.

NOTE:

You may need a small tool (such as a paperclip) to move the switch to the ON or OFF position.

It is not necessary to move the switch to the OFF position  in daily use. Only move the switch to the OFF position  when the Selfie Cam is not in use for an extended period of time.

Camera Button

Press this button to switch to Camera Mode; from here you are able to take photographs.

Video Button

Press this button to switch to Video Mode; from here you are able to Start/Stop recording videos.

Home (ON/OFF) Button

Press this button to turn the Selfie Cam ON. Hold this button down for approximately 2 seconds to turn the Selfie Cam OFF.

While the Selfie Cam is ON, press this button to go to the Home Menu or to go back to the previous Menu.

OK Button

Press this button to confirm a selection.

NOTE: The OK Button can also be used to take photos when in Camera Mode and to Start/Stop recording videos in Video Mode.

Delete Button

Press this button to delete the selected file or cancel the effect in Camera Mode or Video Mode.

D-pad

Press these buttons to make a selection.

Memory Card slot

Insert a microSD card here for memory expansion.

Micro-USB port

Connect to a computer with the included Micro-USB cable to transfer files and to charge the Selfie Cam.

Capture Button (Selfie Stick)

When the Selfie Cam is connected to the Selfie Stick, press this button to take photos in Camera Mode and to Start/Stop recording videos in Video Mode.

Connecting Cable (Selfie Stick)

Plug this into the Micro-USB port of the Selfie Cam to connect to the Selfie Stick.

PRODUCT SPECIFICATION

Display	1.41" colour LCD
Photo Resolution	640X480 (0.3 MP)
Video Resolution	640X480 (Only available when using a memory card. Video effects are not supported at this resolution) 320X240 (default resolution) 160X120
Focus Range	1.5 feet - ∞
Storage Capability (Based on a 2GB capacity memory card)	Photos: 13,100 Video (160X120): 30 minutes (5+ files) Video (320X240): 30 minutes (2+ files) Video (640X480): 15 minutes (1 file) NOTE: The above amounts are approximations. The actual length and capacity of files varies depending on the shooting environment.
Internal Memory	128MB built-in memory (shared with program data, actual memory available for user storage will be less).
External Memory Card Format and Capacity	A microSD or microSDHC card (not included) with a capacity of 1GB to 32GB is recommended.
File Format	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG)
Connectivity	Micro-USB 2.0 cable (included) for connection to a computer.

Battery	Rechargeable Li-ion Polymer battery (non-replaceable).
Optimum Operating and Charging Temperature	0-40°C

NOTE:

Keep the rubber cover of the Micro-USB port and Memory Card slot tightly closed when they are not in use.


STORAGE CAPACITY

		0.3 MP Photos	Video in 160X120 (minutes)	Video in 320X240 (minutes)	Video in 640X480 (minutes)
Internal Memory		600	6	2.5	N/A
External Memory Card	2GB	17,400	160	65	17
	4GB	34,800	320	130	34
	8GB	69,600	640	260	68
	16GB	139,200	1280	520	136
	32GB	278,400	2,560	1,040	272

NOTE: The above amounts are approximations. The actual length and capacity of files varies depending on the shooting environment. The video length limit per file is 30 minutes, or a file size no larger than 2GB.

GETTING STARTED

When using your **Kidizoom® Selfie Cam** for the first time, you will need to switch the Master Power Switch (located at the bottom of the Selfie Cam) to the ON position . You may need a small tool (such as a paperclip) to move the switch to the ON position .

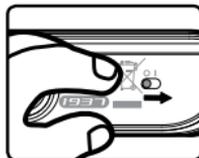

When the Master Power Switch is in the OFF position  it will not be possible to charge the battery or use the Selfie Cam.

NOTE: It is not necessary to move the Master Power Switch to the OFF position  in daily use. Only move the switch to the OFF position  when the Selfie Cam is not in use for an extended period of time.

BATTERY RECHARGING

NOTE: Adult operation required.

Connect the Selfie Cam to your computer using the included Micro-USB cable to charge the battery.

- Make sure that the Master Power Switch is in the ON position  before charging.
- Pull up the rubber cover of the Micro-USB port on the side of the Selfie Cam.
- Insert the Micro-USB cable (small end) into the Micro-USB port of the Selfie Cam.
- Insert the large end of the Micro-USB cable into the USB port of your computer. A USB port is usually marked with this symbol: 
- Once the connection is successful, you will see the battery recharging symbol  appear on the screen of the Selfie Cam.
- Be sure to check the charging progress of the Selfie Cam regularly throughout the recharge.
- When the battery is fully charged, a message will be displayed on the screen of the Selfie Cam. The screen will then automatically turn OFF. You may now disconnect the Selfie Cam from your computer.

NOTE: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0°C to 40°C (32°F - 104°F). If your Selfie Cam needs longer than 3 hours to fully charge, please try charging from a different USB power source.

BATTERY LIFE

The time the battery lasts between charges varies depending on how frequently the Selfie Cam is used. Like other electronic devices, more frequent usage will mean that the battery will drain faster. Some activities will be more demanding on the battery, such as photo and video taking. For continuous photo or video taking, the battery will last for approximately 2-3 hours. For average usage, the battery should approximately last for around 8-12 hours. The remaining battery capacity will be displayed in the right top corner of the screen. When the battery

level is low, it is recommended to recharge the battery before further use. When the battery is depleted, the Selfie Cam will not turn on and will need to be recharged.

POWER SAVING (AUTOMATIC SHUT OFF)

To preserve battery life, the **Kidizoom® Selfie Cam** will automatically turn off after a short period of time without user input. When recording a video, the Selfie Cam will not automatically turn off until the recording has finished.

BATTERY MAINTENANCE

- Charge the battery regularly for optimum performance, even when the Selfie Cam is not in use. For example, fully charge the Selfie Cam at least once every 6 months.
- Move the Master Power Switch to the OFF position  when the Selfie Cam is not in use for an extended period of time. Move the Master Power Switch to the ON position  before charging the battery.

BATTERY NOTICE

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking batteries.
- Keep the battery out of the reach of children.
- Keep the battery dry.
- Examine the battery charging cord periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, housing, or other parts) and that, in an event of such conditions, the battery charging cord should not be used until properly repaired or replaced.
- If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life.

Please dispose of the used battery as described in this manual. The battery life varies from battery to battery depending on storage, operating conditions and environment.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product and batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

QUICK INSTALLATION GUIDE

Attaching and Connecting Kidizoom® Selfie Cam to the Selfie Stick

1. Align the Tripod Screw hole on the **Kidizoom® Selfie Cam** to the Tripod Screw of the Selfie Stick. Screw on clockwise, ensuring a firm attachment.



2. Insert the end of the Selfie Stick's Connecting Cable to the Micro-USB port of the **Kidizoom® Selfie Cam**.



3. When the **Kidizoom® Selfie Cam** is mounted securely on the Selfie Stick and connected. Press the Capture Button while in Camera or Video Mode to take a photo or to start or stop recording a video.
4. To elongate the Selfie Stick, pull the Angle Adjusting Arm outwards. To retract the Selfie Stick, push the Angle Adjusting Arm inwards.
5. To adjust the angle of the Selfie Cam, loosen the Angle Adjusting Switch, then rotate the Angle Adjusting Arm. Tighten the switch when you have finished.

NOTE:

- Be careful of people and objects surrounding you every time you prepare to elongate the Selfie Stick.
- When the Selfie Stick is not in use, ensure you retract the Selfie Stick and disconnect the Connecting Cable from the Selfie Cam.

Neck Strap Attachment

Step 1:

Locate the thread loop on the end of the strap. Insert it into the groove behind the bar and then push it through.




Step 2:

Pull open the lock catch and feed the end of the strap up through the loop and pull it all the way through.



Step 3:

Make sure the loop is securely tightened around the bar, then fasten the lock catch.

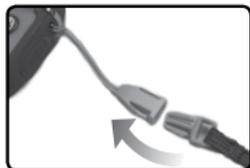

Step 4:

Repeat step 1-3 to attach the other end of the strap to the other bar.




MEMORY CARD INSTALLATION

Kidizoom® Selfie Cam supports the below Memory cards for memory expansion.

- microSD 
- microSDHC 

The microSD Logo and microSDHC logo are trademarks of SD-3C, LCC.

- Make sure the Selfie Cam is turned OFF.
- Locate the Memory Card slot on the side of the Selfie Cam.
- Pull up the rubber cover.
- Insert your microSD or microSDHC card (not included) as illustrated. The memory card will automatically be set as the default storage location for all files.
- To remove the memory card from the slot, push the card once and it will eject.

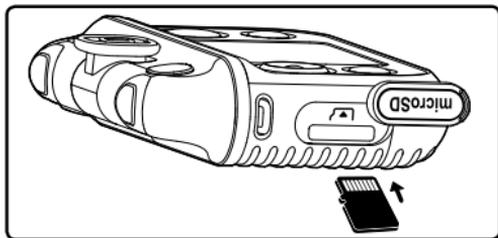

NOTE: If a memory card is being used, the data stored in the internal memory cannot be seen until the memory card has been removed. To prevent accidental data loss, be sure to back up all important data from your memory card before using it.


TO BEGIN USING KIDIZOOM® SELFIE CAM

Make sure that the Master Power Switch is in the ON position  and that the battery has been fully charged before using the Selfie Cam.

NOTE: It is not necessary to move the Master Power Switch to the OFF position  when used daily.

Press the Home (ON/OFF) Button  to turn the Selfie Cam ON. When turning the Selfie Cam ON for the first time, you will need to select the language. Press Up or Down on the D-pad  to select your desired language and press the OK Button  to confirm.

Next, you will need to set the date and time. Press Up or Down on the D-pad  to select the correct day, month, year, hour and minute. Press Left or Right on the D-pad  to jump to the previous or next setting item. Finally, press the OK Button  to confirm the setting.

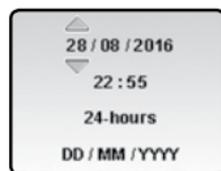

If you wish to change the language, date and time later, you can in the Settings Menu.

NOTE: If the battery level becomes too low, the battery will need to be recharged and the date and time need to be reset.

QUICK OPERATION GUIDE

Take Photos

Press the Camera Button  to go to Camera Mode. In Camera Mode, press the OK Button  or the Camera Button  to take a photo. Press Left or Right on the D-pad  to select different photo effects.

Record Videos

Press the Video Button  to go to Video Mode. In Video Mode, press the OK Button  or the Video Button  to start or stop recording. Press Left or Right on the D-pad  to select different cartoon themes or effects.

Home Menu

In the Home Menu, you can access all activities on the **Kidizoom® Selfie Cam**. Press the Home Button  to display the Home Menu, then press Left or Right on the D-pad  to select an activity, pressing the OK Button  to confirm.



There are 7 activities in the Home Menu:

- Camera 
- Videos 
- Playback 
- Games 
- Make Up Studio 
- Music Slide Show 
- Settings 

View Photos or Videos

Select the Playback icon in the Home Menu to view your photos and videos, the latest photo or video will be displayed on screen first. Press Up or Down on the D-pad  to view the next or previous file. To delete the current file, press the Delete Button  to display the Delete Menu and select \checkmark to confirm. To delete all files, press Down on the D-pad  when in the Delete Menu and select \checkmark to continue, and then follow the instructions on screen to confirm.

To turn your Selfie Cam OFF, hold down the Home (ON/OFF) Button  for 2 seconds. The Selfie Cam will also automatically turn OFF after a short period of time without user input.

CONNECT TO A COMPUTER FOR FILE TRANSFERRING

You can connect **Kidizoom® Selfie Cam** to a PC or Mac computer using the included Micro-USB cable. Once connected, you can transfer files between the Selfie Cam and computer. Please follow the following steps to make the connection.

- Pull up the rubber cover of the Micro-USB port on the side of your Selfie Cam.
- Insert the Micro-USB cable (small end) into the Micro-USB port on the Selfie Cam.
- Insert the larger end of the Micro-USB cable into a USB port on the computer. A USB port is usually marked with this symbol: 
- You will see a removable drive called VTech 1937 on your computer, please use this to transfer files to and from the Selfie Cam. There is another removable drive called VT SYSTEM, which is for the storage of system data only. Do not use the VT SYSTEM drive.
- If there is a memory card in your Selfie Cam, the removable drive of the memory card will appear instead of the VTech 1937.

NOTE: Once the Selfie Cam is connected to your computer, do not disconnect it whilst files are transferring. Only when your Selfie Cam has completed transferring files should you eject it from your computer. Once ejected, you can then physically disconnect the Selfie Cam from your computer.

To avoid any potential damage to your **Kidizoom® Selfie Cam**, ensure that the Micro-USB rubber cover is fully covering the Micro-USB port of your Selfie Cam whenever possible.

To back up photo or video files taken by Kidizoom® Selfie Cam:

- Locate and open the DCIM folder in the removable drive VTech 1937 or the memory card on your computer.
- Your photo and video files will be stored here. Drag and drop these files to a location on your computer to back them up.

To transfer photo or video files to Kidizoom® Selfie Cam:

- Select the photo or video files you would like to transfer from your computer first.
- Locate and open the DOWNLOAD folder in the removable drive VTech 1937 or the memory card on your computer, then drag and drop the files you wish to transfer to your Selfie Cam into the PHOTO subfolder or VIDEO subfolder. Please ensure that video files go into the VIDEO subfolder and that photo files go into the PHOTO subfolder.

NOTE: Do not transfer photo or video files created by other cameras to **Kidizoom® Selfie Cam**, as these file formats may not be compatible.

System Requirements:

PC Hardware Requirements:

CPU: Pentium® 4 or above

Memory: 256MB RAM

300MB Hard disk space

Monitor Resolution: 1024 x 768

USB Port required

PC Software Requirements:

Microsoft® Windows® XP, Windows Vista®, Windows® 7, Windows® 8 or Windows® 10 Operating System

Macintosh Hardware Requirements:

Macintosh Computer with an Intel® processor

Memory: 512 MB RAM

300 MB Hard disk space

USB Port required

Macintosh Software Requirements:

Mac OS X version 10.6, 10.7, 10.8, 10.9, 10.10 or 10.11

The Microsoft® and Windows® logos are trademarks of the Microsoft Corporation in the United States and other countries. Intel® and Pentium® are trademarks of the Intel Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

ACTIVITIES

Camera

Press the Camera Button  or select the Camera icon  in the Home Menu to enter Camera Mode.

- While holding the Selfie Cam steadily, press the Camera Button  or OK Button  to take a photo.
- Press Left or Right on the D-pad  to cycle through different photo effects. Or press Down on the D-pad  to display the Photo Effects Menu to select a photo effect by type.
- The Self-timer function activates a countdown before taking a photo.
- The Face Detection function automatically takes a selfie when faces are detected. The Selfie Cam will then activate a countdown and take a photo. Please ensure that light conditions are good for the best results. If your Selfie Cam does not detect a face, it will still take a photo automatically after a few seconds.
- You can take a collage of photos by selecting the Photo Collage function. First, press Left or Right on the D-pad to select a style, then take photos of you and your friends in each of the frames. To exit, press the Delete Button.

NOTE: The Self-timer can be set and the photo resolution can be changed in Settings, please refer to the Settings section in this manual for details.

Videos

Press the Video Button  or select the Video icon  in the Home Menu to enter Video Mode.

- Press the Video Button  or the OK Button  to start recording. Press either button once again to stop recording. A Play icon  will appear after the recording has stopped, press the OK Button  to watch the video you just recorded. While the video is playing, press the OK Button  or Video Button  to skip the video and return to the video preview screen.
- Press Left or Right on the D-pad  to cycle through different video cartoon themes and effects.
- The Self-timer function activates a countdown before recording a video.

NOTE: The Self-timer can be set and the video resolution can be changed in Settings, please refer to the Settings section in this manual for details.

Playback

Select the Playback icon  on the Home Menu to view the photos and videos you have taken.

- The latest photo or video you have taken will be shown first. Press Up or Down on the D-pad  to select the next or previous file.
- When a video file is selected, press the OK Button  to play it.
- When a photo is selected, press the OK Button  to see a closer view of the photo. You can then use the D-pad to pan across the photo. Press the OK Button  again to return to the view to normal.
- Press the Delete Button  to display the Delete Menu. Use the D-pad  to select your choice and then press the OK Button  to confirm.
- Whilst watching a video file, press Left or Right on the D-pad  to rewind or fast forward. Press the OK Button  to pause or resume the video.

Make Up Studio

In the Make Up Studio, there are two activities. Press Left or Right on the D-pad  to select an activity and then press the OK Button  to begin.

NOTE: The Make Up Studio activities only support photos which are taken within the activity (using the face outline). Photos taken in Camera mode or downloaded from a computer cannot be used here.

1. Hair Salon

In Hair Salon, you can edit your photos to include Hairstyles, Headwear, Glasses, Necklaces and Earrings.

A face outline will be displayed on the screen. To begin, align your face to the face outline on screen and press the OK Button  to take a photo. Or,

press Up or Down on the D-pad  to select a previously taken photo and press the OK Button  to confirm.



Hint:

Try aligning your eyes to the eye position of the face outline first. Then, adjust your position until the rest of your face fits within the remainder of the outline.

Try to keep as much of your face inside the outline as possible for the best results. Once you are in position, remember to look into the Camera Lens when taking your photo.

The Hair Salon Menu will appear once a photo has been taken.

- Use the D-pad  to select the effect you would like to add and press the OK Button  to confirm.



NOTE: To change to the Advanced Settings of a specific effect, press Up on the D-pad  when the effect is selected. The Advanced Settings Menu will then appear. Use the D-pad  to select an option and press the OK Button  to confirm.

Here are the Advanced Settings for the different effects:

Effect Type	Advanced Settings	Description	Operation
Hairstyles 	Position 	To move the position of the chosen Hairstyle.	Use the D-pad  to move the position of the chosen Hairstyle.
Headwear 	Size 	To enlarge or shrink the size of the Headwear.	Press Up or Down on the D-pad  to enlarge or shrink the size of the Headwear.
	Position 	To move the position of the Headwear.	Use the D-pad  to move the position of the chosen Headwear.
Glasses 	Size 	To enlarge or shrink the size of the Glasses.	Press Up or Down on the D-pad  to enlarge or shrink the size of the Glasses.
	Position 	To move the position of the Glasses.	Use the D-pad  to move the position of the chosen Glasses.
Earrings 	Adjust 	To adjust the distance between the Earrings.	Press Left or Right on the D-pad  to decrease or increase the distance between the Earrings.
	Position 	To move the position of the Earrings.	Use the D-pad  to move the position of the chosen Earrings.
Necklaces 	No Advanced Settings		

2. Beauty Parlour

In Beauty Parlour, you can add different Make Up effects to a photo. The effects include Eye Shadow, Blush, Lipstick, Mascara and Party Effect.

To start, align your face with the face outline on the screen and press the OK Button to take a photo.



Or, press Up or Down on the D-pad  to select a

previously taken photo and then press the OK Button to confirm.

The Beauty Parlour Menu will appear once a photo has been taken or selected.

- Use the D-pad  to select an effect you would like to add and press the OK Button to confirm.

NOTE: To change to the Advanced Settings of a specific effect, press Up on the D-pad  when the effect is selected. The Advanced Settings Menu will then appear. Use the D-pad  to select an option and press the OK Button  to confirm.

Here are the Advanced Settings for the different effects:

Effect Type	Advanced Settings	Description	Operation
Eye Shadow 	Shape 	To change the shape of the selected Eye Shadow.	Press Left or Right on the D-pad  to change the shape.
	Adjust 	To adjust the distance between the left and right Eye Shadow.	Press Left or Right on the D-pad  to decrease or increase the distance between the left and right Eye Shadow.
	Position 	To move the position of the effect.	Use the D-pad  to move the position of the effect.

Blush 	Shape 	To change the shape of the selected Blush.	Press Left or Right on the D-pad  to change the shape.
	Adjust 	To adjust the distance between the left and right Blush.	Press Left or Right on the D-pad  to decrease or increase the distance between the left and right Blush.
	Position 	To move the position of the effect.	Use the D-pad  to move the position of the effect.
Lipstick 	Shape 	To change the shape of the selected Lipstick.	Press Left or Right on the D-pad  to change the shape.
	Size 	To enlarge or shrink the size of the Lipstick.	Press Up or Down on the D-pad  to enlarge or shrink the size of the Lipstick.
	Position 	To move the position of the effect.	Use the D-pad  to move the position of the effect.
Mascara 	Adjust 	To adjust the distance between the left and right Mascara.	Press Left or Right on the D-pad  to decrease or increase the distance between the left and right Mascara.
	Position 	To move the position of the effect.	Use the D-pad  to move the position of the effect.
Party Effect 	Position 	To move the position of the effect.	Use the D-pad  to move the position of the effect.

Music Slide Show

In Music Slide Show, you can view all of the fantastic photos you have taken with cool transition effects and background music.

- Press the OK Button  to view the Slide Show Settings Menu to set the following items:

	Items	Options
1	Background Music	Music 1
		Music 2
		Music 3
		Music 4
		Music 5
		Music 6
		Off
2	Slide Speed	Slow
		Normal
		Fast
		Flipbook
3	Transition	Off
		On
4	Shuffle Photos	Off
		On

Games

There are 3 built-in Games on the **Kidizoom® Selfie Cam**. Select the Game icon  on the Home Menu to enter the Game Menu. Use the D-pad  to select a Game and then press the OK Button  to confirm.

Cake Master

The Cake Master likes to try different ingredients to make special cakes! Help her collect the ingredients she needs and see what a kind of special cake she can make by the end of the Game!

Control: Move the Selfie Cam to aim at the ingredient, and press the OK Button to collect it.



Honey Bee Adventure

The Honey Bee works hard every day to collect pollen and nectar from flowers. There are lots of dangers on the Honey Bee's journey home! Help them collect pollen and nectar from the flowers, avoiding any obstacles on the way back!

Control: The Honey Bee will continuously float down towards the bottom of the screen. Press the OK Button (or Up on the D-pad) to move the Honey Bee upwards and try to collect as much pollen and nectar as you can without hitting any obstacles.

Free Play Mode allows you to play continuously for up to 10 minutes. Collect as much pollen and nectar as you can to get the high score!



Hungry Monster

Feed the Hungry Monster! Use the D-pad to move ingredients into position to make food for the Hungry Monster. Press the OK Button to place the ingredients onto the grid. Place them in the correct sequence to make monster food. Be careful though, placing ingredients in the wrong position will take up space and not make monster food! If the grid is full and no more ingredients can be placed, then the game will end! In Normal Mode there is a time limit, so make sure you feed the Hungry Monster before time runs out!

Control: Use the D-pad to move ingredients and press the OK Button to place them.

Free Play Mode allows you to play continuously for up to 10 minutes. Make as much monster food as you can to get the high score!



Settings

Select the Settings icon in the Home Menu to enter the Selfie Cam's Settings.

In Settings, use the D-pad  to make a selection and press the OK Button to confirm. Press the Home (ON/OFF) Button  to exit Settings.

You can adjust the following items:

Volume  : To increase or decrease the volume.

Self-timer  : To set the Self-timer for taking photos or videos ON or OFF.

When the Self-timer is ON, there will be a countdown before a photo or video is taken.

NOTE: The Self-timer will turn OFF automatically every time the Selfie Cam is switched OFF.

Memory  : Here you can see the memory status of the internal memory or external memory card. You can also choose to format the memory or to perform a factory reset of the Selfie Cam. Select an option and then follow the instructions on screen to complete the process.

NOTE:

- Formatting the memory will erase all of the data stored, including all photos and videos.
- If a memory card is being used, then the data stored in the internal memory cannot be seen until the memory card has been ejected.
- When the memory is getting full, or when the file indexes have been used up, you should back up all Selfie Cam files to your computer. Then, delete all of the files on your Selfie Cam to free up space.

Video Resolution  : There are 3 video resolutions to choose from.

160X120: This is the smallest resolution, meaning you can record and save more videos.

320X240: The video quality is better, but will take up more memory so less video can be recorded and saved.

640X480: Best video quality, but the video size will be even larger. Overall recording time may be reduced as a result.

NOTE:

- The 640X480 video resolution is only available to select when using a memory card.
- Only the 320X240 and 160X120 video resolutions support video cartoon themes and effects.

Indoor Light Frequency 

Here you can set the AC power frequency according to the region you're in when travelling. If it is not set correctly, you may see some flickering

on the screen and on the photos and videos you take when in an indoor environment.

NOTE: Please leave your Selfie Cam set to the default value unless you are travelling.

Date & Time

The current date and time can be set here. When in the Date & Time Menu, press Up or Down on the D-pad  to scroll through the options and to select the current day, month, year, hour and minute, as well as the date and time format.

Language

Here you can change the language on the Selfie Cam.

CARE & MAINTENANCE

1. Keep the rubber cover of the Micro-USB port and Memory Card slot closed tightly to prevent dust or water from getting in.
2. Keep the Selfie Cam clean by wiping it with a slightly damp cloth.
3. Keep the Selfie Cam out of direct sunlight and away from any direct heat source.
4. Do not drop the Selfie Cam on a hard surface and do not expose it to moisture or immerse it in water.

WARNING

- A very small percentage of the public, due to an existing condition, may experience epileptic seizures or a momentary loss of consciousness when viewing certain types of flashing colours or patterns.
- While **Kidizoom® Selfie Cam** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor.
- Please note that focusing on at close range and handling a **Kidizoom® Selfie Cam** as a game controller for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15 minute break for every hour of play.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating **Kidizoom® Selfie Cam**.

Problem	Solution
The Selfie Cam has stopped working	<ol style="list-style-type: none">1. Turn the Master Power Switch OFF for 30 seconds.2. Turn the Master Power Switch ON again and then press the Home (ON/OFF) Button  to turn on the Selfie Cam. It should now work properly.3. If it doesn't work, try to recharge the battery and try again. (Refer to the Battery Recharging section for details)
Screen display is abnormal	<ol style="list-style-type: none">1. Turn the Master Power Switch OFF for 30 seconds.2. Turn the Master Power Switch ON again and then press the Home (ON/OFF) Button  to turn on the Selfie Cam. The screen display should be normal again.
Image taken is not clear	<ol style="list-style-type: none">1. Make sure the lighting conditions of the shooting environment are good.2. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in Care & Maintenance.
Cannot connect to a computer	<ul style="list-style-type: none">• Check the connections of the Micro-USB cable between the Selfie Cam and the computer, ensuring that they are firm.• Turn the Master Power Switch OFF for 30 seconds. Turn the Master Power Switch ON and connect to the computer again.
Unable to view a downloaded video or photo file	<p>Check if the downloaded files are in the correct directory in the Kidizoom® Selfie Cam. Photos should be put in the DOWNLOAD/PHOTO folder, and videos should be put in the DOWNLOAD/VIDEO folder when Kidizoom® Selfie Cam is connected to a computer. Kidizoom® Selfie Cam only supports the below formats:</p> <p>Photos in Standard Baseline JPEG and Videos in AVI (Motion JPEG) created by Kidizoom® Selfie Cam.</p>

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtech.co.uk

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

FREQUENTLY ASKED QUESTIONS

Question 1:

I have bought a **Kidizoom® Selfie Cam**, but it will not work with my PC, my PC is looking for a driver. I have searched the internet and cannot find a **VTech® Kidizoom® Selfie Cam** driver. What can I do?

Answer:

There is no separate driver needed for the **Kidizoom® Selfie Cam**. It uses a standard USB mass storage device driver. Such a driver comes standard on all Windows® operating systems starting with Windows® 2000 Service Pack 3 (including Windows® XP, Vista and upwards) and Mac OS® 9.0 or above. If your computer meets these OS requirements and is still looking for a driver, please contact your PC manufacturer for further assistance. For earlier operating systems that do not support mass storage, a system upgrade or mass storage device driver may be available. Again, please check with your PC manufacturer.

Question 2:

What is the ISO value (light sensitivity) of the **Kidizoom® Selfie Cam**?

Answer:

The **Kidizoom® Selfie Cam** uses an auto-ISO value. It auto adjusts the exposure time and light sensitivity depending on the lighting environment.

Question 3:

Why won't my **Kidizoom® Selfie Cam** turn ON?

Answer:

Please make sure the Master Power Switch is ON and the battery is charged.

Question 4:

Why are my pictures sometimes grainy and fuzzy? Is there anything I can do to improve the picture quality?

Answer:

In a poorly lit environment, the frame rate (shutter speed) drops to allow for a longer exposure time. The downside of this is that any movement in the frame, or of the hand holding the Selfie Cam, can result in greater blur. Furthermore, the camera sensor will soften the edges in low light to counteract the darkness by reducing the image noise. This too can sometimes result in a blurred picture. Try to improve the lighting to get better results.

Question 5:

Why are the videos grainy and fuzzy when viewing on the computer screen?

Answer:

Please check if the video player of your computer is set to display the actual resolution and scale of your videos. Viewing the videos on an enlarged screen will result in a poor display quality.

Also, you can set the video resolution of **Kidizoom® Selfie Cam** to 320X240 or 640X480 if there is a memory card installed. The video quality of this option is better than 160X120.

Question 6:

Can you delete a group of pictures at one time, or do they have to be deleted one at a time on the Selfie Cam?

Answer:

If you connect **Kidizoom® Selfie Cam** to your computer and access it as an external drive, you can select multiple pictures to delete at any one time.

Question 7:

If you accidentally delete the pictures by reformatting, is there any way to get them back?

Answer:

Unfortunately, if you delete the pictures by formatting the internal storage memory, there's no way to retrieve them. There is third party software that can help recover deleted data from storage, but we do not recommend using this.

Question 8:

I am trying to transfer my pictures to my computer. I connected per the instructions (connecting the Micro-USB cable to the Selfie Cam and computer) and the new drive appears. However, no pictures are automatically downloading. Is there something I need to do at start-up to get the pictures downloaded and saved?

Answer:

The picture transfer operation does not start by itself. After you have connected the Micro-USB cable to your computer and the drive appears ready, you can open the drive, look under the folder **DCIM** and you should find the images you captured with the **Kidizoom® Selfie Cam**. Moreover, if you wish to upload images to be viewed on **Kidizoom® Selfie Cam**, you can do so by moving the JPEG image files into the folder **DOWNLOAD/PHOTO**.


NOTE: Do not transfer photo or video files created by other cameras to **Kidizoom® Selfie Cam**, as these file formats may not be compatible.

BATTERY DISPOSAL


How to take out the battery for disposal

CAUTION: The below steps must be carried out by an adult and with care. Wearing protective gloves is recommended in case any battery leakage has occurred.

1. Ensure the Master Power Switch is set to the OFF  position.

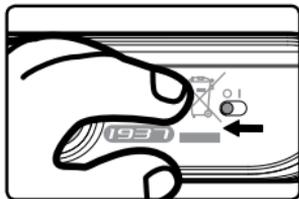


2. Remove the plate covering the back of the Selfie Cam. A tool may be required to lever it off. We recommended trying to remove the plate from the top corner.

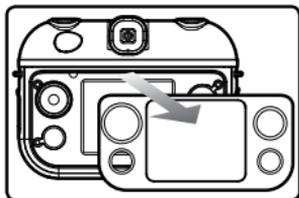


3. Remove the below buttons from the Selfie Cam.



4. Loosen the six screws on the Selfie Cam using a Phillips head screwdriver, then remove the cover.

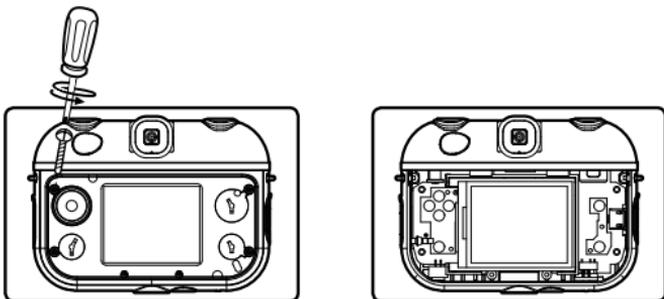

5. The whole Selfie Cam can then be disassembled. Pull out the circuit board and turn it around to reveal the battery on the back.
6. The battery is a silver coloured pack with two wires (positive red wire and negative black wire) connected to the circuit board.
7. Pull out the battery pack until both the positive and negative wires are detached.

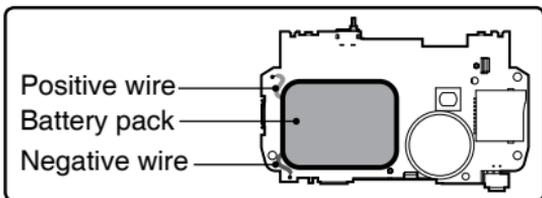

NOTE: Do not cut the wires simultaneously with scissors, pointed objects or any other electrical conductors.

8. After the battery has been taken out, make sure it is handled and disposed of with caution and care.


NOTE:

- Do not pierce the battery pack with any sharp objects.
- Do not allow any wires left attached to the battery to touch each other.
- Do not touch ends of wires attached to the battery with any other electrical conductors.

- Do not expose the battery to direct sunlight or high temperatures.
- Do not handle a damaged Li-ion polymer battery.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

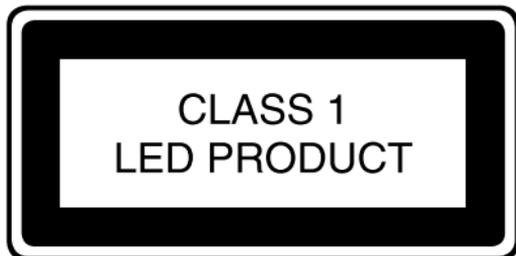



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



UK